Labview 8.0 Runtime Engine For Programmable DC Power Supply Installing Manual







다음은 당사의 제품을 통신제어하기 위한 데모 프로그램을 사용하고자 할 때 사전에 설치하여야

할 프로그램입니다. LabVIEW_8.0_Runtime_Engine 프로그램을 확인하시고 아래의 순서대로 설치를

완료하신 후 당사의 제품을 제어하기 위한 Windows Application Demo Program을 설치하신 후

사용하시기 바랍니다. 기타 자세한 문의사항은 아래의 메일 또는 유선으로 직접 문의하시기 바랍니다.

E-mail : oda@odacore.com

Website : www.odacore.com

Tel: 82-32-623-5454(Hunting)

I. LabVIEW_8.0_Runtime_Engine 설치.

1. LabVIEW_8.0_Runtime_Engine.zip 파일 실행

LabVIEW_8.0_Runtime_Engine
This self-extracting archive will create an installation image on your hard drive and launch the installation, After installation completes, you may delete the installation image to recover disk space, You should not delete the installation image if you wish to be able to modify or repair the installation in the future,
[^쪽 번]

2. UnZip버튼클릭

WinZip Self-Extractor - LabVIEW_8.0_Run 🔀		
To unzip all files in this self-extractor file to the specified folder press the Unzip button.	<u>U</u> nzip	
Unzip to folder:	Run <u>W</u> inZip	
C:\National Instruments Downloa Browse	<u>C</u> lose	
✓ Overwrite files without prompting	About	
✓ When done unzipping open: .\setup.exe	<u>H</u> elp	



3. successfully 확인

WinZip Self-Extractor
130 file(s) unzipped successfully

4. Runtime Engine 자동실행

🖓 NI LabVIEW 8.0 Runtime Engine		
\searrow		
NI LabVIEW 8.0 Runtime Engine Exit all programs before running this Setup. Disabling virus scanning utilities may improve installation speed. This program is subject to the accompanying License Agreement(s).		
Labylew [®] 8		
	i.com/labview	
Please wait while the installer initializes.		
© 2005 National Instruments. Al rights reserved.		
<< <u>B</u> ack <u>N</u> ext >>	Cancel	



5. Next버튼 클릭





6. Next

NI LabVIEW 8.0 Runtime Engine	
Destination Directory Select the primary installation directory.	
Select the folder to install National Instruments products C:₩Program Files₩National Instruments₩	Browse
<u>8</u>	ack <u>N</u> ext>> <u>C</u> ancel



7. Default상태에서 Next

🗏 NI LabVIEW 8.0 Runtime Engine	
Features Select the features to install.	
NI LabVIEW Run-Time Engine 8.0 Variable Engine Datasocket LabVIEW Deployable License Logos USI	NI LabVIEW Run-Time Engine 8.0
Directory for NI LabVIEW Run-Time Engine 8.0	Browse
R <u>e</u> store Defaults <u>D</u> isk Cost	<a><< Back <a>Next >> <a>Cancel



8. 라이선스 계약에서 동의선택 후 Next

🔏 NI LabVIEW 8.0 Runtime Engine 🛛 📐	
License Agreement You must accept the license(s) displayed below to proceed.	
NATIONAL INSTRUMENTS 소프트웨어 라이션	벤스 계약 🧧
설치상 주의사항: 이것은 계약이다. 소프트웨어 다운로드 및 료하기 이전에 본 계약내용을 신중히 읽도록 한다. 귀하는 로드 및 설치 과정 완료를 위한 해당 버튼을 누름으로써, 본 하고 본 계약에 구속받을 것에 동의하게 된다. 본 계약의 당 상의 조건에 구속되기를 원치 않는 경우, 설치 과정 취소 버 프트웨어를 다운로드 및 사용하지 말며 소프트웨어 취득 7 를 (모든 수반 문서와 용기 포함) 수령한 일로부터 30일 이미 반납한다. 반납 시, NI의 당시 반납 정책에 따른다.	및 설치 과정을 완 소프트웨어 다운 - 계약 조건에 동의 상사자로써 본 계약 티튼을 클릭하여 소 상소로 소프트웨어 내에 소프트웨어를
1. <u>정의.</u> 본 계약에서 다음의 용어들은 다음과 같은 의미를	불 갖는다: ▼
 ● Laccept the Lic ○ I do not accept 	cense Agreement(s). the License Agreement(s).
< Back Ne	ext >> <u>C</u> ancel



9. Next

🚜 NI LabVIEW 8.0 Runtime Engine	
Start Installation Review the following summary before continuing.	
Adding or Changing • NI LabVIEW Run-Time Engine 8.0 • Variable Engine • Datasocket • LabVIEW Deployable License • Logos • USI	
Click the Next button to begin installation. Click the Back button to change the i	nstallation settings.
<u>Save File</u> << <u>B</u> ack <u>N</u> e	ext >> <u>C</u> ancel



10. 설치하는동안 대기

NI LabVIEW 8.0 Runtime Engine	
Start Installation Review the following summary before continuing.	
Adding or Changing NI LabVIEW Run-Time Engine 8.0 Variable Engine Datasocket LabVIEW Deployable License Logos USI 	
Click the Next button to begin installation. Click the Back button to change th	e installation settings.
<u>Save File</u> << <u>B</u> ack	Next>> Cancel



11. 인스톨 성공 Finish버튼 클릭

🔏 NI LabVIEW 8.0 Runtime Engine		
Installation Complete	ß	
The NI LabVIEW 8,0 Runtime Engine ir	nstallation is complete,	
	<< <u>B</u> ack	Next >> Einish

12. 리부팅





표. Visa410runtime 설치.

1. 실행

NI-VISA 4.1 Runtime	
This self-extracting archive will create an installa After installation completes, you may delete the in You should not delete the installation image if you future,	ition image on your hard drive and launch the installation, nstallation image to recover disk space, u wish to be able to modify or repair the installation in the
[폭단	취소

2. Unzip클릭

WinZip Self-Extractor - visa410runtime.exe 🔀		
To unzip all files in visa410runtime. specified folder press the Unzip butt	exe to the ton.	<u>U</u> nzip
Unzip to folder:		Run <u>W</u> inZip
Downloads\NI-VISA Runtime\4.1	<u>B</u> rowse	<u>C</u> lose
✓ Overwrite files without prompting	About	
✓ When done unzipping open: .\setup.exe		Help

3. 성공





4. 자동실행



5. Next





6. Next

🧏 NI-VISA 4.1 Runtime	
Destination Directory Select the primary installation directory.	
National Instruments software will be installed in a subfolder different folder, click the Browse button and select another.	of the following. To install into a
Destination Directory C:₩Program Files₩National Instruments₩	Browse Konsteiner (State State S

7. 설치 디렉토리 C:\#Program Files\#National Instruments\₩ 선택

🦷 NI-VISA 4.1 Runtime		
Features Select the features to install.		
 NI-VISA 4.1 Run Time Support PXI GPIB Serial GPIB-VXI Ethernet Remote Enet-Serial USB FireWire TULIP COM Support 	National Instruments VISA driver version 4.1. VISA provides an API for controlling VXI, GPIB, Serial, PXI and other types of instruments.	
Directory for NI-VISA 4.1 C:\U00e7VXIPNP\U00ff Browse		
Restore Defaults Disk Cost Kext >> Cancel		



8. 동의 후 Next

🦉 NI-VISA 4.1 Runtime		
License Agreement You must accept the license(s) displayed below to proceed.		
NATIONAL INSTRUMENTS 소프트웨어 라이셴크	느계약 🔷	
설치상 주의사항: 이것은 계약이다. 소프트웨어 다운로드 및 설치 과정을 완 료하기 이전에 본 계약내용을 신중히 읽도록 한다. 귀하는 소프트웨어 다운 로드 및 설치 과정 완료를 위한 해당 버튼을 누름으로써, 본 계약 조건에 동의 하고 본 계약에 구속받을 것에 동의하게 된다. 본 계약의 당사자로써 본 계약 상의 조건에 구속되기를 원치 않는 경우, 설치 과정 취소 버튼을 클릭하여 소 프트웨어를 다운로드 및 사용하지 말며 소프트웨어 취득 장소로 소프트웨어 를 (모든 수반 문서와 용기 포함) 수령한 일로부터 30일 이내에 소프트웨어를 반납한다. 반납 시, NI의 당시 반납 정책에 따른다.		
1. <u>정의</u> . 본 계약에서 다음의 용어들은 다음과 같은 의미를	를 갖는다:	
 I accept the Licens I do not accept the 	e Agreement(s). License Agreement(s).	
<< <u>B</u> ack <u>N</u> ext >	>> <u>C</u> ancel	

9. 설치정보 확인 후 Next

📆 NI-VISA 4.1 Runtime	
Start Installation Review the following summary before continuing.	
Upgrading • National Instruments system components Adding or Changing • NI-VISA 4.1 Run Time Support PXI GPIB Serial GPIB-VXI Ethernet Remote Enet-Serial USB Fire/Vire TULIP COM Support	
Click the Next button to begin installation. Click the Back button t	to change the installation settings.
Save File)	<u>}ack Next>> </u> _ancel



10 설치 시작

🤹 NI-VISA 4.1 Runtime		
	R	
Overall Progress		
Currently installing NI Uninstaller, Part 1 of 10,		
Copying new files		
	<< <u>B</u> ack <u>N</u> ext	>> <u>C</u> ancel

11. 설치완료

🧏 NI-VISA 4.1 Runtime	
Installation Complete	
Installation complete! You might be prompted to reboot your machine,	
	>> <u>F</u> inish



12. 리부팅



Ⅲ. 응용 프로그램 실행.

모든 설치가 끝나신 후 당사에서 무상으로 공급하는 Windows Application을 실행하십시오.

당사의 Application은 웹사이트에서 무상으로 제공받으실 수 있습니다.